

## ADSL Modem Model:Asus AAM 6000EV


- Front Panel



LED Indicator	Status	Description
1. POWER	Steady green light	The unit is power on
2. STATUS	Steady green light	A valid ADSL connection
	Blinking green light	Invalid ADSL connection
3. LINE	Off	No traffic over ADSL line
	Blinking green light	There is traffic over ADSL line
4. PC	Steady light	A valid LAN connection
	Blinking green light	Traffic between LAN and PC
5. TEST	Off	Modem in normal stage
	Blinking green light	Error occur

\* If the signal is abnormal, there might be a connection problem with the Modem. Please refer to the below picture (rear panel) and check whether the connections are secured between the Modem and your LAN card, then reset the Modem (re-establish a new connection) or turn off the Modem and restart your computer and see whether it resumes to normal operation. If the status Modem remains the same, please contact our 24-hour Customer Service Hotline at 1222.

- **Rear Panel**

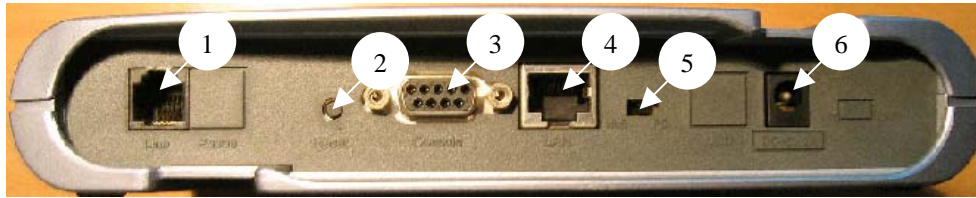

<b>Rear connections</b>	<b>Description</b>
1. Line	ADSL port, connecting to the HGC socket/splitter
2. Reset	Press and hold this button for 3 seconds to restore the default setting.
3. Console	No Use
4. LAN	Ethernet port, connecting to a PC or HUB
5. HUB/PC	Must switch to PC side
6. Power	Power input plug