


VDSL Modem Model: DXO XV1000


- **Front Panel**

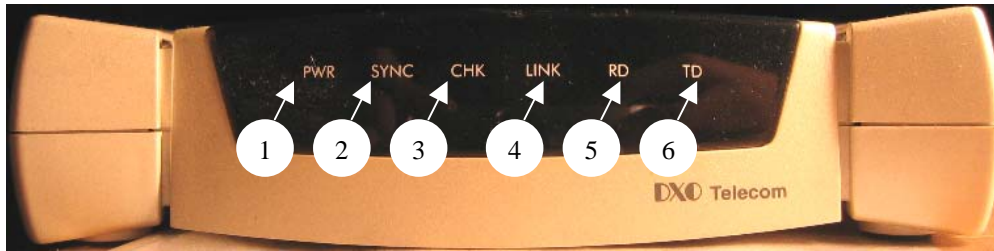

LED Indicator	Status	Description
1. PWR	Steady green light	The unit is power on
2. SYNC	Steady green light	A valid VDSL connection
	Off	Invalid VDSL connection
3. CHK	Blinking red light	Try to sync. (only flash 1-2 seconds) or invalid VDSL connection (non-stop flashing)
	Steady red light	Invalid VDSL connection
4. LINK	Steady light	A valid LAN connection
5. RD	Blinking green light	There is downlink traffic over VDSL
	Off	No traffic
6. TD	Blinking green light	There is uplink traffic over VDSL
	Off	No traffic

* If the signal is abnormal, there might be a connection problem with the Modem. Please refer to the below picture (rear panel) and check whether the connections are secured between the Modem and your LAN card, then reset the Modem (re-establish a new connection) or turn off the Modem and restart your computer and see whether it resumes to normal operation. If the status Modem remains the same, please contact our 24-hour Customer Service Hotline at 1222.

- **Rear Panel**

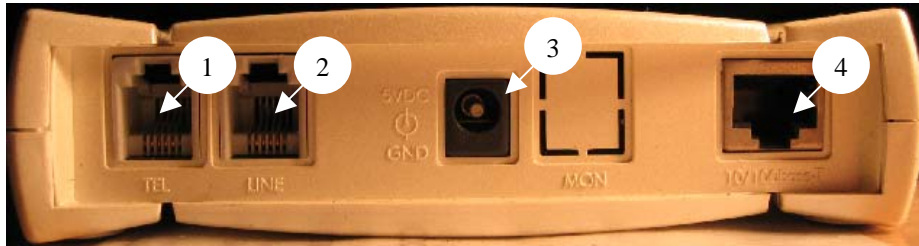

Rear connections	Description
1. TEL	No use
2. LINE	VDSL port, connecting to the HGC socket/splitter
3. 5V DC	Power input plug
4. 10/100 Base-T	Ethernet port, connecting to a PC or HUB